



**GE Energy  
Nuclear**

**NEDO-33234  
Class I  
eDRF 0000-0046-8503  
October 2005**

**LICENSING TOPICAL REPORT**

**REACTOR TRIP AND ISOLATION FUNCTION  
DIGITAL TRIP MODULE FUNCTION SOFTWARE DESIGN  
SPECIFICATION**

**(Conditional Release – pending closure of design verifications)**

***Copyright 2005 General Electric Company***

## **NON PROPRIETARY INFORMATION NOTICE**

This is a non proprietary version of the document NEDE-33234P, which has the proprietary information removed. Portions of the document that have been removed are indicated by an open and closed bracket as shown here [[ ]].

## **IMPORTANT NOTICE REGARDING CONTENTS OF THIS REPORT PLEASE READ CAREFULLY**

The information contained in this document is furnished for the purpose of supporting the NRC review of the certification of the ESBWR, with the information here being used as reference. The only undertakings of General Electric Company with respect to information in this document are contained in contracts between General Electric Company and any participating utilities, and nothing contained in this document shall be construed as changing those contracts. The use of this information by anyone other than that for which it is intended is not authorized; and with respect to **any unauthorized use**, General Electric Company makes no representation or warranty, and assumes no liability as to the completeness, accuracy, or usefulness of the information contained in this document.

## TABLE OF CONTENTS

<b>1. INTRODUCTION.....</b>	<b>1</b>
1.1 Objectives .....	1
1.2 Definitions and Acronyms.....	1
1.3 Design Scope .....	1
1.4 Applicable Documents .....	1
1.4.1 Supporting Documents.....	1
1.4.2 Supplemental Documents .....	2
1.4.3 Reference Documents .....	2
1.5 Platform Description.....	2
1.5.1 Target Platform Description .....	2
1.5.2 Design Platform Description.....	2
1.6 Development Tools.....	3
1.6.1 Compiler .....	3
1.6.2 Emulator.....	3
1.6.3 NUMAC Build Utility .....	3
1.6.4 Supporting Software .....	3
<b>2. DTM FUNCTIONAL SOFTWARE DESIGN CONSIDERATIONS.....</b>	<b>4</b>
2.1 Introduction .....	4
2.2 DTM Software Architecture Overview .....	4
2.2.1 DTM Software Components.....	4
2.2.1.1 OS.....	5
2.2.1.2 Hardware Module Drivers.....	5
2.2.1.3 DTM Application Layer Software .....	5
2.2.1.3.1 Dividing into Software Tasks.....	5
2.2.1.3.2 Task Scheduling and Task Priority .....	7
2.2.2 External interfaces .....	7
2.2.2.1 FDDI Protocol based external interfaces .....	7
2.2.2.1.1 RMU Interfaces.....	8

2.2.2.1.2	TLU Interfaces.....	8
2.2.2.1.3	CIM Interfaces.....	8
2.2.2.1.4	NMSCLI Interface.....	8
2.2.2.2	RS485 Protocol based interfaces.....	9
2.2.2.3	Digital I/O interface .....	9
2.2.2.4	Analog I/O interface.....	9
2.2.3	DTM Software States.....	9
2.2.3.1	OS Initialization .....	9
2.2.3.2	DTM Software Initialization .....	10
2.2.3.3	DTM Software Functional Mode .....	10
2.2.3.3.1	OPERATE Mode .....	11
2.2.3.3.2	INOP Mode .....	11
3.	SOFTWARE SAFE DESIGN DISCUSSION.....	11
3.1	General.....	11
3.2	The Digital Trip Module.....	12
3.3	DTM Functional Safety Summary .....	12
3.4	General DTM Software Safety .....	13
4.	DTM FUNCTIONAL CONTROLLER SOFTWARE DESIGN.....	13
4.1	Task Table .....	13
4.2	Assignment of Instrument Functions to Tasks .....	15
4.2.1	Watchdog Task .....	15
4.2.2	Trip Monitor Task.....	15
4.2.3	Temperature Monitor Task .....	16
4.2.4	FDDI Output Task .....	17
4.2.5	[Section Deleted] .....	17
4.2.6	Display Input Task.....	17
4.2.7	Display Output Task .....	17
4.2.8	Chassis Monitor Task .....	18
4.2.9	Calibrate Task .....	18
4.2.10	Self-Test.....	18
4.3	Description of Instrument Functions .....	19

4.3.1	Software Initialization.....	19
4.3.1.1	Recalling Non-Volatile Storage .....	20
4.3.1.2	Initializing Hardware Drivers.....	20
4.3.1.3	Instrument ID .....	20
4.3.1.4	ID-Dependent Instrument Configuration .....	20
4.3.1.5	Initializing the Instrument Time of Day Clock .....	20
4.3.1.6	Initializing the Open Drain Outputs.....	20
4.3.1.7	Initializing Global Flags.....	21
4.3.2	Trip and Alarm Calculation .....	21
4.3.2.1	Conversion to Engineering Units .....	21
4.3.2.1.1	RPV Narrow Range Water Level (L3) .....	21
4.3.2.1.2	RPV Wide Range Water Level (1.5) .....	21
4.3.2.1.3	RPV Dome Pressure .....	22
4.3.2.1.4	Drywell Pressure.....	22
4.3.2.1.5	CRD Charging Pressure .....	22
4.3.2.1.6	TCV ETS Oil Pressure.....	22
4.3.2.1.7	Main Condenser Vacuum .....	23
4.3.2.1.8	MSL Turbine Inlet Pressure.....	23
4.3.2.1.9	Main Steam Line Flow .....	23
4.3.2.1.10	Reactor Building Accelerations.....	24
4.3.2.1.11	MSL Tunnel Temperatures .....	24
4.3.2.1.12	Main Steam Line Turbine Area Temperatures .....	24
4.3.2.1.13	Suppression Pool Bulk Average Temperature.....	25
4.3.2.1.14	Turbine Stop Valve Positions .....	25
4.3.2.1.15	Turbine Bypass Valve Positions .....	26
4.3.2.1.16	MSIV Inboard & Outboard Positions .....	26
4.3.2.1.17	APRM Simulated Thermal Power (STP) .....	26
4.3.2.1.18	TCV/TSV Trip Bypass Determination .....	26
4.3.2.2	Trip Equations.....	27
4.3.2.2.1	RPV Narrow Range Water Level Low Trip .....	27
4.3.2.2.2	RPV Wide Range Water Level Low Trip .....	28

4.3.2.2.3	RPV Dome Pressure High Trip.....	28
4.3.2.2.4	RPV Dome Pressure Low Trip.....	29
4.3.2.2.5	Drywell Pressure High Trip.....	29
4.3.2.2.6	CRD Charging Pressure Low Trip.....	30
4.3.2.2.7	CRD Charging Pressure Rod Withdraw Block .....	31
4.3.2.2.8	TCV ETS Oil Pressure Low .....	31
4.3.2.2.9	TSV Closure Trip .....	32
4.3.2.2.10	Seismic Activity Trip.....	33
4.3.2.2.11	Suppression Pool (S/P) Temperature High Trip .....	34
4.3.2.2.12	Main Steam Line Isolation Trip.....	34
4.3.2.2.13	Main Condenser Vacuum Low Trip.....	35
4.3.2.2.14	MSL Turbine Inlet Pressure Low Trip .....	36
4.3.2.2.15	MSL Flow High Trips .....	36
4.3.2.2.16	MSL Tunnel Temperature High Trips.....	37
4.3.2.2.17	MSL Turbine Area Temperature High Trip .....	38
4.3.2.2.18	Inoperative Trip.....	40
4.3.2.2.19	Trouble Alarm .....	41
4.3.2.2.20	RTIF Channel Bypass Indication.....	42
4.3.3	Instrument Trip and Alarm Outputs.....	42
4.3.4	Digital Inputs and Outputs.....	42
4.3.4.1	Digital Inputs.....	42
4.3.4.1.1	Fast sampled Digital Inputs .....	42
4.3.4.1.2	Slow Sampled Digital Inputs .....	43
4.3.4.2	Digital Outputs.....	44
4.3.5	Instrument Communications.....	45
4.3.5.1	Communicating with the LDU.....	49
4.3.5.1.1	CPU Module serial (RS485) Ports.....	50
4.3.5.1.2	DMA Operation .....	50
4.3.5.2	FDDI Communications .....	51
4.3.5.3	RMU to RTIF LDU communication.....	52
4.3.6	Analog I/O .....	52

4.3.6.1	Initialization of Analog Modules .....	52
4.3.6.2	Initialization of 4-20 mA.....	52
4.3.6.3	4-20 mA (Analog) Signal Processing.....	53
4.3.6.4	Initialization of ASP module.....	53
4.3.6.5	Initialization of Thermocouple Inputs.....	53
4.3.6.6	Thermocouple Input (Analog) Signal Processing .....	54
4.3.6.7	Monitor LVPS.....	55
4.3.6.8	Calibrating Analog I/O Module .....	55
4.3.6.9	Calibrating 4-20 mA Card.....	56
4.3.6.10	Calibrating ASP Card .....	56
4.3.6.11	Calibrating Six-Thermocouple Input Card .....	57
4.3.6.12	Auto-Calibration .....	57
4.3.7	MSL Turbine Temperature Monitoring .....	59
4.3.7.1	Cold Junction Reference Temperature Monitoring.....	59
4.3.8	Instrument Watchdog.....	59
4.3.8.1	Watchdog Reset Suppression.....	59
4.3.8.2	Task Period Calculation .....	60
4.3.8.3	Task Delay Calculation .....	60
4.3.8.4	Watchdog Bypass and Exception Management .....	60
4.3.9	Instrument Self-Test.....	60
4.3.9.1	INOP Mode Operation .....	61
4.3.9.2	OPERATE Mode Operation.....	61
4.3.9.3	Modules Tested .....	61
4.3.9.3.1	Functional Controller Module.....	61
4.3.9.3.2	Analog I/O Module .....	62
4.3.9.3.3	4-20 mA Module.....	62
4.3.9.3.4	ASP Module .....	62
4.3.9.3.5	Thermocouple Input Module.....	63
4.3.9.3.6	Isolated Digital Input Module .....	63
4.3.9.3.7	Low Voltage Power Supplies .....	63
4.3.9.3.8	Open Drain I/O Module.....	64

4.3.9.3.9	FDDI Module .....	64
4.3.9.4	Error Handling.....	64
4.3.9.4.1	Critical and Non-Critical Self-Test Faults .....	64
4.3.9.4.2	Successive Error Requirement.....	65
4.3.10	User-Entered Parameters .....	65
4.3.10.1	Set Parameter Mode (INOP Set Mode) .....	65
4.3.10.2	Non-Volatile Storage (NVRAM) Operation.....	66
4.3.11	Miscellaneous Instrument Functions.....	66
4.3.11.1	Trip/Output Check .....	66
4.4	Interrupts and Exceptions .....	66
4.4.1	Exception Handling .....	68
4.4.2	Interrupt Service Routines .....	68
4.4.2.1	NMI_int.....	68
4.4.2.2	DMA_chain_hdr.....	69
4.4.2.3	Timer0_int.....	69
4.4.2.4	Bus_timeout_int .....	69
4.4.2.5	Tmr_isr.....	69
4.4.2.6	DMA_tc_hdr .....	69
4.5	Timing analysis.....	69
4.5.1	Worst Case CPU Loading.....	70
4.5.2	Worst Case FDDI Interface Loading .....	72
4.5.3	Worst Case LDU (RS485) Interface Loading.....	73
4.5.4	DTM Functional Controller Software Sizing Analysis .....	74
4.6	Starting Configuration .....	75
4.6.1	Library Packages.....	75
4.6.2	Application Specific Packages.....	75
5.	SOFTWARE MODULE DESIGN .....	76
5.1	Software Module Architecture .....	78
5.2	Module Description .....	80
5.2.1	Display Input Module Description.....	80
5.2.2	Display Out Module Description.....	80



5.2.3	Monitor Module Description .....	81
5.2.4	This software package implements the Trip Monitor task, Temperature Monitor Task, Chassis Monitor Task, and the procedures for initializing the DTM functional controller software and all the hardware modules. FDDI Interface Module Description.....	81
5.2.5	Calibration Module Description .....	81
5.2.6	Self-Test Module Description.....	81
5.2.7	Watchdog Module Description .....	81
6.	<b>APPENDIX A: REQUIREMENTS TRACEABILITY MATRIX .....</b>	<b>82</b>
7.	<b>APPENDIX B: SYMBOLS, ABBREVIATIONS, AND ACRONYMS.....</b>	<b>100</b>
8.	<b>APPENDIX C: ITS-90 TABLE FOR TYPE E THERMOCOUPLES .....</b>	<b>104</b>
9.	<b>APPENDIX D: SELF-TEST ERROR MESSAGES AND CRITICALITY .....</b>	<b>106</b>
10.	<b>APPENDIX E: COMPONENT AND MODULE LEVEL FAULT MODE ANALYSIS .....</b>	<b>107</b>
11.	<b>APPENDIX F: SOFTWARE SAFE DESIGN GUIDELINES .....</b>	<b>113</b>

## LIST OF TABLES

TABLE 1: TASK TABLE .....	14
TABLE 2: DIGITAL INPUTS.....	43
TABLE 3: DIGITAL INPUTS CONTINUED.....	43
TABLE 4: DIGITAL OUTPUTS .....	45
TABLE 5: INPUT MESSAGES TO DTM.....	46
TABLE 6: MESSAGES SENT BY DTM .....	48
TABLE 7: THERMOCOUPLE INPUTS .....	55
TABLE 8: INTERRUPTS AND EXCEPTIONS.....	67
TABLE 9: APPLICATION COMPONENT BREAKDOWN.....	78
TABLE 10: DRIVER COMPONENT BREAKDOWN.....	79
TABLE 11: SUPPORT COMPONENT BREAKDOWN.....	80

## 1. Introduction

The Software Design Specification (SDS) describes the high level design of the ABWR RTIF Digital Trip Module (DTM) Functional Controller software.

The intended audience for this document includes the following:

- Software Engineering
- Software V&V
- Quality Assurance
- System Engineer

### 1.1 Objectives

The purpose of this document is threefold:

- Define the Functional software design in sufficient detail such that software implementation can be undertaken without need for major design decisions.
- Provide a means for understanding how the DTM Functional Controller Software fulfills the design input requirements.
- Identify safety concerns and mitigation provided by the design.

### 1.2 Definitions and Acronyms

See Appendix A.

### 1.3 Design Scope

The DTM Functional controller software is designed to timely collect all the sensor inputs necessary to perform setpoint comparison logic on the sensor inputs, and generate sensor trip outputs to the Trip Logic Units (TLU) of each safety division. The sensor inputs are collected by receiving sensor inputs from the RTIF Remote Multiplexing Unit (RMU), digitizing the thermocouple sensor inputs from the Turbine Building, and reading discrete inputs. The software converts the sensor input parameters to engineering units before the setpoint comparison and trip logic. Signals for the trip and alarm outputs are also provided to the Control Room Local Display Unit (LDU), and the Process Computer system via the Communications Interface Module (CIM) in the safety division. The DTM also provides Control Rod Drive (CRD) Charging Pressure Trip signal to Rod Control & Information System (RCIS A & B).

### 1.4 Applicable Documents

#### 1.4.1 Supporting Documents

Supporting documents provide the design input requirements for this document. These include the system level documents, any instrument level documents and any external communication protocol documents.

- |  |    |    |
|--|----|----|
| 1. RTIF DTM Performance Specification..... | [[ | ]] |
| 2. RTIF LDU User's Manual .....            | [[ | ]] |

3. RTIF LDU Protocol Specification ..... [[ ]]
4. RTIF Local Display Unit Performance Specification ..... [[ ]]
5. RTIF FDDI Communication Protocol Specification ..... [[ ]]
6. RTIF Digital Trip Module Schematic Diagram ..... [[ ]]

#### 1.4.2 Supplemental Documents

Supplemental documents are used along with this SDS to shape the implementation of the software. The RTIF FDDI Communication Protocol Specification is both a supporting document and a supplemental document, but will only be included in the supporting documents section for simplicity.

1. ABWR DCIS Software Configuration Management Plan ..... [[ ]]
2. ABWR DCIS Software Management Plan ..... [[ ]]
3. ABWR DCIS Software Verification and Validation Plan ..... [[ ]]
4. Software Conventions and Guidelines ..... [[ ]]
5. EOP NEDE-21109, GE Energy Nuclear Engineering Operating Procedures.

#### 1.4.3 Reference Documents

This SDS uses the following documents as references.

1. NM386 Operating System User's Guide ..... [[ ]]

### 1.5 Platform Description

#### 1.5.1 Target Platform Description

The DTM Functional Controller consists of the NUMAC 386SX Computer Module [[

]]

#### 1.5.2 Design Platform Description

Development of the RTIF DTM Functional Controller software is to be done on a cluster of DEC VAXstation [[

]]

## 1.6 Development Tools

### 1.6.1 Compiler

[[

]]

### 1.6.2 Emulator

The DTM functional software development activities will use the DTM prototype chassis in conjunction with an INTEL 80386 in-circuit emulator (ICE). [[

### 1.6.3 NUMAC Build Utility

[[	
	]]

### 1.6.4 Supporting Software

[[	

	]]

## 2. DTM Functional Software Design Considerations

### 2.1 Introduction

DTM is part of the Reactor Trip and Isolation Function (RTIF) of the Safety System Logic and Control (SSLC) system and performs certain Reactor Protection System (RPS) functions and Main Steam Isolation Valve (MSIV) control functions of the Leak Detection & Isolation (LDI) system. The DTM software is designed to digitize sensor inputs from the Turbine Building and receive sensor inputs from the RTIF Remote Multiplexing Unit (RMU), convert the sensor input parameters to engineering units, perform setpoint comparison logic on the sensor inputs, and generate sensor trip outputs to the Trip Logic Units (TLU) of each safety division. [[

]]

### 2.2 DTM Software Architecture Overview

A software design must have an underlying architecture, which directs the interaction of the software components, the internal hardware resources, and the external interfaces including the user interfaces. The Digital Trip Module (DTM) functional software architecture design must meet a set of performance requirements set forth by the Instrument's Performance Specification including the array of timing restrictions and the control logics. Additionally, it must provide division between safety and non-safety functions and fault isolation between all functions. This section gives an overview the critical items that drive the design of the software

#### 2.2.1 DTM Software Components

The DTM software is composed of three main components; the NM386 operating system, set of hardware module driver packages, and the DTM application software. [[

]]

[[ \_\_\_\_\_ . ]]

### **2.2.1.1 OS**

The NM386 Operating System is the backbone of the DTM software. It is responsible for operating all the resources on the CPU card, and scheduling software task execution. It is also responsible for providing access mechanisms to the system resources such as semaphore, queues, timer functions, and hooks for installing application specific interrupt service routines and assigning task priorities. [[

]]

### **2.2.1.2 Hardware Module Drivers**

All types of the NUMAC hardware modules are equipped with various mechanisms to interface with the host software. The hardware module drivers provide the hardware module interface functions for the instrument specific application software. [[

]]

### **2.2.1.3 DTM Application Layer Software**

The DTM application layer software utilizes the OS and the hardware drivers to implement the software requirements specified in the DTM Instrument Performance Specification. This component provides the division of the software tasks, body of the software tasks, task-supporting functions including the functions interfacing to the drivers and the OS. [[

]]

#### **2.2.1.3.1 Dividing into Software Tasks**

Each major function performed by the functional software will be designated a "task". Tasks are the highest level of procedures in the DTM functional software, and only they will be called directly from the operating system. [[

]]

[[

]]



### **2.2.1.3.2 Task Scheduling and Task Priority**

[[

]]

## **2.2.2 External interfaces**

With its two protocol based interfaces, the FDDI and the RS485 (LDU), the DTM instrument communicates with other RTIF instruments in order to collect data from the source instruments, process the collected data, and send out the processed data to the destination instruments. [[

]]

### **2.2.2.1 FDDI Protocol based external interfaces**

The following subsections define the interfaces that utilize the FDDI protocol. Please note that while this document lists input and output rates of FDDI messages for convenience, it defers to the FDDI Protocol Specification [1.4.1(3)] for all of these rates. [[

]]

### **2.2.2.1.1 RMU Interfaces**

#### **2.2.2.1.1.1 Redundancy**

The FDDI link between the RMU and the DTM is so critical that two fully redundant FDDI links, primary and secondary, are provided. The two instruments always communicate over both the primary link (A13-J1) and the secondary link (A13-J2). [[

]]

#### **2.2.2.1.1.2 RMU and DTM messages**

[[

]]

#### **2.2.2.1.1.3 RMU and LDU communication**

[[

]]

#### **2.2.2.1.2 TLU Interfaces**

[[

]]

#### **2.2.2.1.3 CIM Interfaces**

[[

]]

#### **2.2.2.1.4 NMSCLI Interface**

[[

]]

### **2.2.2.2 RS485 Protocol based interfaces**

The DTM communicates with the control room LDU using the RS485 protocol based interface located in the CPU module. [[

]]

### **2.2.2.3 Digital I/O interface**

The DTM software reads various discrete inputs such as contacts, and instrument's division ID, using the two Isolated Digital Input (IDI) Modules. The keylock switch and the interlock switch are read using the Open Drain I/O (ODIO) card. [[

]]

### **2.2.2.4 Analog I/O interface**

The DTM software reads the Main Steam Line Turbine area temperature sensor inputs via the analog module after the input signals get pre-conditioned by the two Six-thermocouple Input Modules. [[

]]

## **2.2.3 DTM Software States**

The DTM software is expected to operate in one of the predefined states below:

- OS initialization
- DTM software initialization
- DTM software functional Mode

### **2.2.3.1 OS Initialization**

Before the DTM software can come into the context of execution following a power cycle or a reset, the OS completes its own initialization first and updates its data structure with the application software specific data such as the application task names, task priorities, and also the interrupt service routine addresses. Once that state is achieved, the OS continuously schedules the DTM software tasks upon the system timer interrupt. [[

]]

### 2.2.3.2 DTM Software Initialization

Prior to the start of the DTM software initialization (and at every 50 ms thereafter), the watchdog task resets the watchdog timer so that the timer does not expire and generate the NMI (Non-Maskable Interrupt) to the CPU during the initialization. The trip monitor task upon its first scheduled run performs the DTM software initialization and transitions to its forever-loop state. Therefore, the initialization is called only once before the next reset, or power cycle. [[

]]

[[

]]

### 2.2.3.3 DTM Software Functional Mode

Following the initialization the DTM software is in the functional mode executing the software tasks each of which has a set of functions to perform. The OS schedules the DTM software tasks primarily based on the priority of each task. Once a task is scheduled by the OS, it completes its set of functions and suspends itself for its predefined period before the OS schedules it to run again inside the task's forever-loop. Since the Watchdog monitor has the highest priority, it runs first before any other tasks. [[

]]

#### 2.2.3.3.1 OPERATE Mode

When the keylock switch is in the OPERATE position, the DTM software tasks perform their normal operations of collecting, processing and outputting data autonomously in the predefined ways. [[

]]

#### 2.2.3.3.2 INOP Mode

When the keylock switch is in the INOP position, the DTM software continues calculating and outputting trips to the TLU and communicating with all partnering instruments. The DTM software also does not transition itself from the OPERATE mode to the INOP mode when it detects the RMU keylock position change to INOP as indicated by the RMU FDDI message. [[

]]

[[

]]

### 3. Software Safe Design Discussion

This section is a brief discussion of the manner in which the DTM software can directly impact the safety of the RTIF System with emphasis on mitigations and controls in place to allow the DTM to perform it's primary function. Further detail can be found in the design sections of this document, Appendix E and Appendix F. Note that this section provides an overview and basic design guidance. It does not trace directly to system requirements. [[

]]

#### 3.1 General

Software has several functions it must perform in the RTIF systems and failure to perform those functions correctly can directly impact the safety of the systems in several ways.

For the RTIF instruments, software is responsible for monitoring the state of the instrument itself; it's sensors and hardware. This monitoring takes two forms. The software is responsible for reading and processing of sensors and other inputs, processing the data received, determining the validity of that data and acting accordingly. Additionally, software must monitor the health of the instrument. This monitoring, called Surveillance, should allow the software to detect the majority of hardware failures in a timely fashion and react appropriately to mitigate the hazard, maintain the primary function of the system when possible and fail in a safe manner when continued operation is not possible or desirable. Failure of the software to properly handle potential fault conditions, bad data and inputs or hardware failure could result in a failure of the instrument in its primary function. In this document this is referred to as "Functional Safety" and is discussed further in this section and elsewhere in the document, where deemed most appropriate.

Additionally, software must be designed in such a way that it does not challenge the system, that is it must not introduce faults where none existed. Examples of this type of fault would be a data corruption caused by one task interfering with another or a task that takes control of the system and doesn't allow other critical tasks the opportunity to process. This type of fault; a "Software Design Fault"; is best mitigated by following good design practices and guidelines such as those described briefly here and in Reference [1.4.2(5)], "Software Conventions and Guidelines". In this document this is referred to as "Software Safety" and is discussed further in this section and elsewhere in the document, where deemed most appropriate.

[[

]]

### **3.2 The Digital Trip Module**

The DTM instrument is designed, manufactured, and qualified as Class 1E equipment. All of the functions performed by the DTM are classified as Nuclear Safety-Related.

### **3.3 DTM Functional Safety Summary**

The primary purpose of the DTM instrument is to perform its safety related functions. Whenever the instrument becomes incapable of performing its safety related function or the ability to perform the safety related function becomes adversely affected, the DTM will assert its INOP trip output in order to achieve a safe state.

The main consideration given to the DTM software architecture as described in section 2.0 is safety. The software is also designed to maintain simple orderly execution of tasks while providing robust fault detection and handling. Because it is not desirable to halt the continuous operation of the software for minor faults while the reactor is operating, the fault handling is well separated for critical errors and non-critical errors.

The DTM Functional Controller software has been designed such that data received from the division RMU, TLU, CIM, and NMSCLI is validated before applied. If any input is out of range Invalid Data Code is substituted for the input.

[[

]]

### **3.4 General DTM Software Safety**

[[

]]

## **4. DTM Functional Controller Software Design**

[[

]]

### **4.1 Task Table**

Each of the tasks comprising the DTM Functional Controller software is described in the table below. The table shows the operational characteristics of each task: its priority, how often it is executed, the method by which it suspends (remains inactive), and the manner in which it is invoked.

**Table 1: Task Table**

[[





]]

## 4.2 Assignment of Instrument Functions to Tasks

The following sections list the instrument functions assigned to each of the tasks listed in the task table in section 4.1. The functions are described in detail in section 4.3. [[

]]

### 4.2.1 Watchdog Task

The Watchdog task is responsible for monitoring software health by monitoring task execution time. See section 4.3.7 for details. This is a safety critical task. [[

]]

### 4.2.2 Trip Monitor Task

[[

]]

### **4.2.3 Temperature Monitor Task**

[[

]]

#### **4.2.4 FDDI Output Task**

[[

]]

#### **4.2.5 [Section Deleted]**

#### **4.2.6 Display Input Task**

[[

]]

#### **4.2.7 Display Output Task**

[[

]]

#### **4.2.8 Chassis Monitor Task**

[[

]]

#### **4.2.9 Calibrate Task**

[[

]]

#### **4.2.10 Self-Test**

[[

]]

### 4.3 Description of Instrument Functions

The following sections provide a brief description of each instrument function performed by the DTM Functional Controller software:

- Software Initialization
- Trip and alarm calculations
- Digital Inputs
- Digital Outputs
- Communications
- Analog I/O
- Temperature Monitoring
- Instrument Watchdog
- Instrument Calibration
- Instrument Self-test
- User-Entered Parameters
- Miscellaneous Instrument Functions

#### 4.3.1 Software Initialization

At instrument power-up, the Functional Controller software recalls non-volatile parameters and initializes instrument hardware and software. All DTM sensor input readings are zeroed out while all sensor inputs from the RMU are set to invalid. All DTM tasks (other than the Trip Monitor Task) when scheduled for the first time check to see if the "Software Initialized" flag is indicating the initialization of the software and hardware is complete. If a task finds the flag is not set, it will not go onto the next step. [[

]]

#### **4.3.1.1 Recalling Non-Volatile Storage**

[[

]]

#### **4.3.1.2 Initializing Hardware Drivers**

[[

]]

#### **4.3.1.3 Instrument ID**

[[

]]

#### **4.3.1.4 ID-Dependent Instrument Configuration**

[[

]]

#### **4.3.1.5 Initializing the Instrument Time of Day Clock**

[[

]]

#### **4.3.1.6 Initializing the Open Drain Outputs**

[[

]]

#### **4.3.1.7 Initializing Global Flags**

[[

]]

#### **4.3.2 Trip and Alarm Calculation**

The trip calculations are defined in the DTM performance specification (1.4.1 (1)) and used to build the trip status for the TLU. If any value of sensor data from the RMU is out of operating range or the link is down, the DTM would substitute the value with Invalid Data Code. An invalid data value from the RMU for a 4-20 mA input will be bigger than the maximum range value used by the DTM software and will become invalid. An invalid thermocouple data value from the RMU will be smaller than the minimum range value used by the DTM software and will become invalid. An Invalid Data Code for a sensor would cause a sensor trip. If any of the trip setpoints have become unknown, the DTM will use default values. The DTM will substitute a default value for a setpoint input which is out of range. In case the dual redundant FDDI link between the RMU and the DTM is down all the sensor inputs from RMU will be assigned Invalid Data Code.

##### **4.3.2.1 Conversion to Engineering Units**

###### **4.3.2.1.1 RPV Narrow Range Water Level (L3)**

This is one of the filtered 4-20 mA inputs from the RMU. [[

]]

###### **4.3.2.1.2 RPV Wide Range Water Level (1.5)**

This is one of the filtered 4-20 mA inputs from RMU. [[

]]

#### **4.3.2.1.3 RPV Dome Pressure**

This is one of the filtered 4-20 mA inputs from RMU. [[

]]

#### **4.3.2.1.4 Drywell Pressure**

This is one of the filtered 4-20 mA inputs from RMU. [[

]]

#### **4.3.2.1.5 CRD Charging Pressure**

This is one of the filtered 4-20 mA inputs from RMU. [[

]]

#### **4.3.2.1.6 TCV ETS Oil Pressure**

This input is read directly from the DTM's own 4-20 mA card. [[



#### **4.3.2.1.7 Main Condenser Vacuum**

This is one of the filtered 4-20 mA inputs from RMU. [[

]]

#### **4.3.2.1.8 MSL Turbine Inlet Pressure**

This is one of the filtered 4-20 mA inputs from RMU. [[

]]

#### **4.3.2.1.9 Main Steam Line Flow**

There are four main steam line flow inputs (A, B, C, D) from the RMU. [[

]]

#### 4.3.2.1.10 Reactor Building Accelerations

There are five Reactor Building Acceleration digital inputs embedded in the digital input word sent by RMU. [[

]]

#### 4.3.2.1.11 MSL Tunnel Temperatures

There are two MSL tunnel temperature inputs. One input is from the Reactor Building side and the other from the Turbine Building side. [[

]]

#### 4.3.2.1.12 Main Steam Line Turbine Area Temperatures

The Functional Computer reads the nine Main Steam Line (MSL) Turbine Area Temperature inputs via the Thermocouple and Analog I/O Module. The temperature monitor task converts the voltage signals read to degrees centigrade (°C) for Type E thermocouples. Cold junction reference compensation is added in the conversion process using ambient temperature data read from each thermocouple input and the user entered Cold Junction Reference Offset. [[

]]

[[

]]

[[

]]

#### **4.3.2.1.13 Suppression Pool Bulk Average Temperature**

The SP Bulk Average Temperature is sent to the DTM from the RMU over the FDDI interface in the RMU SP Temperature Monitor data update FDDI message. [[

]]

#### **4.3.2.1.14 Turbine Stop Valve Positions**

Two valve positions (TSV Open and TSV > 90 % Open) are read in from the Integrated Digital Input cards. [[

]]

#### **4.3.2.1.15 Turbine Bypass Valve Positions**

The bypass valve positions are read in from the Integrated Digital Input cards. [[

]]

#### **4.3.2.1.16 MSIV Inboard & Outboard Positions**

The Main Steam Isolation Valve (MSIV) positions are read in from the Integrated Digital Input cards. There are a total of four inputs; "Inboard MSIV >92% Open", "Outboard MSIV >92% Open", "Inboard MSIV >90% Open" and "Outboard MSIV >90% Open". [[

]]

#### **4.3.2.1.17 APRM Simulated Thermal Power (STP)**

[[

]]

#### **4.3.2.1.18 TCV/TSV Trip Bypass Determination**

[[

]]

#### **4.3.2.2 Trip Equations**

##### **4.3.2.2.1 RPV Narrow Range Water Level Low Trip**

[[

]]

[[

]]

[[

]]

**4.3.2.2.2 RPV Wide Range Water Level Low Trip**

[[

]]

**4.3.2.2.3 RPV Dome Pressure High Trip**

[[

]]

**4.3.2.2.4 RPV Dome Pressure Low Trip**

[[

]]

**4.3.2.2.5 Drywell Pressure High Trip**

[[

]]

[[

]]

#### **4.3.2.2.6 CRD Charging Pressure Low Trip**

[[



]]

#### **4.3.2.2.8 TCV ETS Oil Pressure Low**

[[

]]

#### **4.3.2.2.9 TSV Closure Trip**

[[

]]

#### **4.3.2.2.10 Seismic Activity Trip**

[[

]]

**4.3.2.2.11 Suppression Pool (S/P) Temperature High Trip**

[[

**4.3.2.2.12 Main Steam Line Isolation Trip**

[[

]]

**4.3.2.2.13 Main Condenser Vacuum Low Trip**

[[

]]

**4.3.2.2.14 MSL Turbine Inlet Pressure Low Trip**

[[

]]

**4.3.2.2.15 MSL Flow High Trips**

[[

]]

#### **4.3.2.2.16 MSL Tunnel Temperature High Trips**

[[

]]

#### **4.3.2.2.17 MSL Turbine Area Temperature High Trip**

[[





]]

#### **4.3.2.2.18 Inoperative Trip**

[[

]]

**4.3.2.2.18.1 Mutual Inop Indication**

[[

]]

**4.3.2.2.18.2 INOP Trip Output Suppression**

[[

]]

**4.3.2.2.19 Trouble Alarm**

[[

]]

#### **4.3.2.2.20 RTIF Channel Bypass Indication**

[[

]]

### **4.3.3 Instrument Trip and Alarm Outputs**

Upon power up, the trip monitor task will assume all tripped condition and lit the Trip indicator LED before the completion of the first cycle of the self-test. Once the first cycle of the self-test completes, the trip monitor will start to calculate the trips. [[

]]

### **4.3.4 Digital Inputs and Outputs**

#### **4.3.4.1 Digital Inputs**

[[

]]

##### **4.3.4.1.1 Fast sampled Digital Inputs**

[[

]]

**Table 2: Digital Inputs**

[[


]]

The trip monitor task accepts the readings from the IDI card when the IDI cards are initialized properly.

#### 4.3.4.1.2 Slow Sampled Digital Inputs

[[

]]

**Table 3: Digital Inputs Continued.**

[[	
----	--

	]]

The digital inputs for mode switch is only accepted if two consecutive reads confirms the same states.

#### 4.3.4.2 Digital Outputs

The digital outputs are changed due to various events detected throughout the DTM software, but the Trip Monitor Task refreshes the output every 100 msec in order not to default back to the default states. [[

]]

Table 4: Digital Outputs

[[	
	]]

4.3.5 Instrument Communications

The functional controller software sends and receives communication/control messages from the various RTIF and NMS instruments at various rates.

[[ ]]

Table 5: Input Messages to DTM

II				




11

[[

]]

**Table 6: Messages sent by DTM**[illegible]


]]

#### **4.3.5.1 Communicating with the LDU**

The communication between the RTIF LDU and the DTM Functional Controller Software is driven by the Display output task and the Display input task. However, any task can send a response message to the LDU.

[[

]]

**4.3.5.1.1 CPU Module serial (RS485) Ports**

The communication between the RTIF LDU and the DTM Functional Controller uses a serial (RS485) port on the CPU module and the fiber optics isolation module. [[

**4.3.5.1.2 DMA Operation****4.3.5.1.2.1 Receiver Operation**

The DMA channel for the receive operation is initialized by the display input task before the task enters its forever-loop. For the receive operation a receive queue is provided for the incoming messages. Receiving process is multi-staged. Each stage is only responsible for a section of the incoming message. [[

]]

#### **4.3.5.1.2.2 Transmitter Operation**

The Transmitter DMA operation is initialized by the display output task before the task enters its forever-loop. [[

]]

#### **4.3.5.2 FDDI Communications**

The DTM instrument communicates with RMU, TLU, CIM, and NMSCLI using three FDDI Interface cards. Each card utilizes a 125MHz fiber direct data interface. Refer to the RTIF FDDI Protocol Specification (1.4.1 (3))for information regarding frequency of transmission and data content.

[[

[[

]]

#### **4.3.5.3 RMU to RTIF LDU communication**

The DTM functional controller software relays RMU messages destined for the RTIF LDU since there is no direct link between the two.

#### **4.3.6 Analog I/O**

The analog I/O function digitizes the following analog inputs:

- low voltage power supplies voltage readings
- the Main Steam Line (MSL) Turbine temperature inputs (Six Thermocouple Inputs)
- TCV ETS Oil Pressure Input
- Test Monitor Outputs

[[

]]

##### **4.3.6.1 Initialization of Analog Modules**

[[

•

]]

##### **4.3.6.2 Initialization of 4-20 mA**

During the power up initialization the DTM monitor task initializes the global variables used for the 4-20 mA processing. [[

]]

#### **4.3.6.3 4-20 mA (Analog) Signal Processing**

The Trip monitor task is responsible for acquiring and processing the 4-20 mA analog input data (Only one input - TCV ETS Oil Pressure). [[

]]

#### **4.3.6.4 Initialization of ASP module**

[[

]]

#### **4.3.6.5 Initialization of Thermocouple Inputs**

[[

]]

[[

]]

#### 4.3.6.6 Thermocouple Input (Analog) Signal Processing

The thermocouple inputs are processed by the DTM instrument's Temperature Monitor Task that performs the Temperature Monitor function. [[

]]

The temperature monitor task Reads and filters the thermocouple inputs after muxing the signals to the Analog I/O module. The calibration gain and offset corrections of the isolation amplifiers are applied to each T/C input reading and converted to equivalent thermocouple microvolts ( $\mu\text{V}$ ). The TC  $\mu\text{V}$  values are cold junction reference compensated, filtered using a single-pole IIR filter with a 3.0 second time constant. The cold junction reference are converted to  $^{\circ}\text{C}$  and stored in global variables for used by the self-test.

[[

]]



**Table 7: Thermocouple Inputs**

[[				

]]

**4.3.6.7 Monitor LVPS**

[[

]]

**4.3.6.8 Calibrating Analog I/O Module**

Once the user requests the manual calibration the Calibration Task performs the following in sequence:

- Overwrite all calibration corrections in use on the Analog I/O modules so that the A/D and D/A can be calibrated.

---

<sup>1</sup> Refer to the Six Thermocouple Input Module Performance Specification (see section 2.3.1 (f)).

- Verify the time base of the instrument upon the user request. [[  
]]
- Determine the D/A gain and offset correction factors for the A/D modules. [[

]]

- Check the A/D outputs. For each A/D module, the user is requested to connect a voltmeter at the test point and verify the voltmeter reading against the expected voltage range values displayed. [[

]]

- If the operator erroneously inputs data, the calibration sequence does not stop with an error. The entire sequence is repeated in this case.

#### **4.3.6.9 Calibrating 4-20 mA Card**

[[

]]

#### **4.3.6.10 Calibrating ASP Card**

[[

]]

#### **4.3.6.11 Calibrating Six-Thermocouple Input Card**

[[

]]

#### **4.3.6.12 Auto-Calibration**

[[



#### **4.3.7 MSL Turbine Temperature Monitoring**

A MSL turbine temperature input is selected by setting up the mux in one of the two thermocouple cards. Once a temperature input is selected, it is routed to the A/D card for conversion to digital value. An analog input is converted using the `input_analog()` function in the `analog.c` module. [[

]]

##### **4.3.7.1 Cold Junction Reference Temperature Monitoring**

The cold junction reference temperatures are important in making correct temperature measurements and checked regularly by the temperature monitor task to see if they are in range. [[

]]

#### **4.3.8 Instrument Watchdog**

The watchdog task prevents the hardware watchdog timer from expiring by periodically pulsing the one shot circuitry. [[

]]

##### **4.3.8.1 Watchdog Reset Suppression**

Before refreshing the memory-mapped I/O point, which suppresses the watchdog reset, the task periods and task delays of each of the tasks comprising the DTM Functional Controller software are evaluated and compared against a pre-defined limit. [[

]]

#### **4.3.8.2 Task Period Calculation**

The task period is a measure of the time interval between successive task starts. Each task start is indicated by time stamping its return to the top of the infinite executive loop. [[

]]

#### **4.3.8.3 Task Delay Calculation**

The task delay is a measure of the time interval between the time a task last finished (and time stamped its completion) and the current time. An unexpectedly long task delay indicates that a task is taking longer to begin execution than expected. [[

]]

#### **4.3.8.4 Watchdog Bypass and Exception Management**

Certain user-initiated, asynchronous events undertaken while the DTM is in INOP mode require time delays which exceed the pre-defined max-task-periods and max-task-delays of one or more tasks allowed under normal operation. To prevent watchdog reset due to known time-intensive events, one or more tasks may be exempt from watchdog evaluation (i.e., comparison of task period and delay against threshold values) for programmable intervals.

[[

]]

#### **4.3.9 Instrument Self-Test**

Whenever the DTM Functional Controller software is not performing one of the aforementioned functions, it performs an instrument self-test. Depending on the instrument mode, the self-test may cycle automatically or await operator requests. The following sections describe the different modes of self-test operation and the individual tests performed.

#### **4.3.9.1 INOP Mode Operation**

When the DTM mode is switched from OPERATE to INOP mode, the self-test function stops and awaits operator request from the RTIF LDU. There are three possibilities: START, SKIP and STOP (STOP is available only after a module self-test has been initiated). [[

]]

#### **4.3.9.2 OPERATE Mode Operation**

When the DTM is in OPERATE mode, self-testing continuously cycles whether faults are detected or not. A counter keeps track of the number of self-test cycles and another one is used to indicate the last cycle that detected an error. [[ ]]

#### **4.3.9.3 Modules Tested**

The following sections briefly describe the tests performed on the various modules.

##### **4.3.9.3.1 Functional Controller Module**

[[

]]

#### **4.3.9.3.2 Analog I/O Module**

[[

]]

#### **4.3.9.3.3 4-20 mA Module**

[[

•

]]

#### **4.3.9.3.4 ASP Module**

[[



]]

#### **4.3.9.3.5 Thermocouple Input Module**

[[

]]

#### **4.3.9.3.6 Isolated Digital Input Module**

[[

]]

#### **4.3.9.3.7 Low Voltage Power Supplies**

[[

]]

**4.3.9.3.8 Open Drain I/O Module**

[[

]]

**4.3.9.3.9 FDDI Module**

[[

]]

**4.3.9.4 Error Handling**

Faults detected by module self-tests are encoded into a bit mapped word, which is parsed by the Self-Test task. The following sections describe actions taken upon self-test fault detection.

**4.3.9.4.1 Critical and Non-Critical Self-Test Faults**

Self-test faults detected and reported by the DTM Functional Controller software are classified as either critical or non-critical faults. Critical self-test faults result in assertion of both DTM INOP trip and DTM Trouble alarm while non-critical self-test faults result in assertion of Trouble alarm only.

[[

]]

#### 4.3.9.4.1.1 Critical Fault Classification

[[

•

]]

#### 4.3.9.4.1.2 Non-Critical Faults

[[

•

#### 4.3.9.4.2 Successive Error Requirement

When the error word returned by a module self-test function indicates a fault, the module is tested again. [[

]]

#### 4.3.10 User-Entered Parameters

All user-entered parameters are received from the RTIF LDU via special parameter-set communication sequences while the instrument is in the INOP-SET mode. [[

]]

##### 4.3.10.1 Set Parameter Mode (INOP Set Mode)

The DTM only transitions to INOP Set mode only if the keylock switch is in INOP mode. To enter set-parameter mode whereby user-entered parameters may be updated, the user must enter a password (itself subject to change by the user) at the RTIF LDU. [[

]]

#### **4.3.10.2 Non-Volatile Storage (NVRAM) Operation**

[[

]]

[[

]]

#### **4.3.11 Miscellaneous Instrument Functions**

##### **4.3.11.1 Trip/Output Check**

While in the INOP mode, the user may:

- Generate any trips DTM calculates
- Change the state of digital outputs

[[

]]

#### **4.4 Interrupts and Exceptions**

The interrupt signals and exceptions (traps) serviced by the DTM Functional Controller, along with their corresponding service routines are tabulated below:




]]

#### 4.4.1 Exception Handling

All exceptions are handled by the NM386 Operating System. The OS calls an application level service which records the exception and the processor state in non-volatile storage. [[

]]

#### 4.4.2 Interrupt Service Routines

##### 4.4.2.1 NMI\_int

The non-maskable interrupt (NMI) is asserted for one of two reasons:

- system power has been removed or
- the hardware watchdog timer has expired

[[

]]

#### 4.4.2.2 DMA\_chain\_hdr

[[  
]]

#### 4.4.2.3 Timer0\_int

[[  
  
  
  
]]

#### 4.4.2.4 Bus\_timeout\_int

[[

#### 4.4.2.5 Tmr\_isr

[[  
  
]]

#### 4.4.2.6 DMA\_tc\_hdr

[[


]]

### 4.5 Timing analysis

The timing analysis is conducted based on the actual timing data from the ABWR NUMAC NMSCLI instrument. The primary goal of the timing analysis at this point is to close out the risks of not having enough CPU power or the bandwidth in the external interface hardware to carry out the design called out in this document. [[

]]

#### 4.5.1 Worst Case CPU Loading

This analysis is based on the 20 msec cycle on which the trip monitor task runs. This cycle is the most important restriction on the system timing, because the task performs the most important safety related functions. [[

]]

[[

]]



**Figure 1 – Task Timing Analysis**

[[

500 540 500 500 540 550 500 570 500 500 500

]]

[[

]]

#### **4.5.2 Worst Case FDDI Interface Loading**

Each FDDI port will have varying amount of traffic load. The interface between the RMU and the DTM will carry the heaviest FDDI traffic load. The time to pack and place the data into the TX\_Load buffer or to retrieve and unpack the data from RX\_Read buffer has been included in the task execution time estimate.

[[

]]

#### **4.5.3 Worst Case LDU (RS485) Interface Loading**

[[

]]

**4.5.4 DTM Functional Controller Software Sizing Analysis**

The DTM functional controller sizing analysis is based on the DTM prototype software. [[

]]

[[


]]

## **4.6 Starting Configuration**

The following sections describe the software packages from which this design is derived.

### **4.6.1 Library Packages**

[[

]]

### **4.6.2 Application Specific Packages**

[[

]]

## 5. Software Module Design

**Figure 5-1: Data Flow Diagram**

[[

[[

TI  
F

|

---

]]

### 5.1 Software Module Architecture

The ABWR DTM Functional Controller software will be designed to be modular. The following main modules will be developed to implement the tasks and requirements described in previous sections.

**Table 9: Application Component Breakdown**

[[


]]



[[

]]

**Table 10: Driver Component Breakdown**

[[


]]

[[

]]

**Table 11: Support Component Breakdown**

[[


]]

**5.2 Module Description**

The source file headers and software procedure headers will be an extension of the SDS (this document). Each procedure header will document the procedure description and the design decision. This section describes some of the major modules in the Application component.

**5.2.1 Display Input Module Description**

This software package implements the Display Input task and the support procedures to receive and processes messages from the RTIF LDU. The messages are defined in the RTIF LDU Protocol specification (1.4.1 (3)). The procedures in this package configure the data structure and call the necessary procedures in the Serial package for the data reception.

**5.2.2 Display Out Module Description**

This software package implements the Display Output task and the procedures to build and transmit messages to the RTIF LDU. The messages are defined in the RTIF LDU Protocol specification (1.4.1 (3)). The procedures in this package configure the data structure and call the necessary procedures in the Serial package for the data transmission.

**5.2.3 Monitor Module Description.**

**5.2.4 This software package implements the Trip Monitor task, Temperature Monitor Task, Chassis Monitor Task, and the procedures for initializing the DTM functional controller software and all the hardware modules. FDDI Interface Module Description.**

This software package implements the FDDI output task and the procedures to build and transmit messages and receive and decode messages. The FDDI messages are defined in the RTIF FDDI protocol specification (1.4.1 (3)). Procedures in this package call the necessary procedures in the NUMAC FDDI Software packages for data transmission and data reception.

**5.2.5 Calibration Module Description**

This software package implements the Calibrate task and the procedures to perform calibration functions for the Analog module, 4-20 mA and Thermocouple modules.

**5.2.6 Self-Test Module Description**

This software package implements the Self-Test task and the procedures to perform self test on all the hardware modules in the chassis.

**5.2.7 Watchdog Module Description**

This software package implements watchdog task and the procedures to perform watchdog related functions.

## [[

[illegible]

[illegible]





[illegible]



NEDO-33234

[illegible]



[illegible]

NEDO-33234

[illegible]

NEDO-33234

[illegible]

[illegible]



NEDO-33234

[illegible]



NEDO-33234

[illegible]

NEDO-33234

[illegible]

NEDO-33234

[illegible]

NEDO-33234

[illegible]


]]

## 7. Appendix B: Symbols, Abbreviations, and Acronyms

°C	Degrees Centigrade
$\Omega$	Ohm
$\mu$ A	MicroAmperes
$\mu$ V	Microvolts
A/D	Analog-to-Digital (Converter)
ANSI	American National Standards Institute
ASP	Automatic Signal Processor
Auto	Automatic
BNC	British Naval Connector
cm	Centimeters
CPU	Central Processing Unit
CRC	Cyclic Redundancy Check
CRD	Control Rod Drive
CRJ	Cold Junction Reference
D/A	Digital-to-Analog (Converter)
DCIS	Distributed Control & Information System
deg C	Degrees Centigrade
DSP	Digital Signal Processor
DTM	Digital Trip Module
EL	Electro-Luminescent
ELD	Electro-Luminescent Display

EMI	Electromagnetic Interference
EPRI	Electric Power Research Institute
EPROM	Erasable Programmable Read-Only Memory
FDDI	Fiber Direct Data Interface
F/O	Fiber Optic
GE	General Electric
Hz	Hertz
ICD	Interface Control Drawing
ID	Identification
IEEE	Institute of Electrical and Electronics Engineers
INOP	Inoperative
INOP-CAL	Inoperative-Calibrate
INOP-SET	Inoperative-Set Parameters
I/O	Input/Output
IPS	Instrument Performance Specification
ITS-90	International Temperature Scale of 1990
KHz	KiloHertz
LDI	Leak Detection & Isolation
LDU	Local Display Unit
LED	Light Emitting Diode
LVPS	Low Voltage Power Supply
mA	MilliAmperes
MIL-HDBK	Military Handbook

MIL-STD	Military Standard
msec	Milliseconds
MSIV	Main Steam Isolation Valve
MSL	Main Steam Line
MTBF	Mean Time Between Failure
MTTR	Mean Time to Repair
mV	Millivolt
N/A	Not Applicable
NR	Narrow Range
NRC	Nuclear Regulatory Commission
NUMAC	Nuclear Measurement Analysis and Control
NVRAM	Non-Volatile Random Access Memory
OK	Okay
OPER	Operate
PCB	Printed Circuit Board
RAM	Random Access Memory
ROM	Read Only Memory
RB	Reactor Building
RMU	Remote Multiplexing Unit
RPS	Reactor Protection System
RPV	Reactor Pressure Vessel
RTIF	Reactor Trip and Isolation Function
RX	Receiver or Receive



SCRAM	Safety Control Rod Axe Man (Reactor Trip - Safety Control Rod Insertion)
S/P	Suppression Pool
SPT	Suppression Pool Temperature
SPTM	Suppression Pool Temperature Monitor
SSLC	Safety System Logic and Control
TB	Terminal Board or Turbine Building
T/C	Thermocouple
TLU	Trip Logic Unit
TTL	Transistor-Transistor Logic
TX	Transmitter or Transmit
V	Volts
Vdc	Volts Direct Current

## **8. Appendix C: ITS-90 Table for Type E Thermocouples**

[[

]]

## **9. Appendix D: Self-Test Error Messages and Criticality**

[[ ]]

# **10. Appendix E: Component and Module Level Fault Mode Analysis**

[[









]]

## **11. Appendix F: Software Safe Design Guidelines**

[[

]]