

ENCLOSURE 1

SERIAL: NLS-84-062

BRUNSWICK STEAM ELECTRIC PLANT
PROPOSED TECHNICAL SPECIFICATION PAGES - UNIT 1

(CP&L SERIAL 84TSB06)

8406120183 840606
PDR ADOCK 05000324
P PDR

SUMMARY LIST OF REVISIONS
BRUNSWICK UNIT 1

PAGE

COMMENT

1-10

Added Footnotes (#) and (##)

Revised Footnotes (*), (**), and (***)

Changed Column Title to "AVERAGE REACTOR COOLANT
TEMPERATURE"

TABLE 1.2
OPERATIONAL CONDITIONS

<u>OPERATIONAL CONDITIONS</u>	<u>MODE SWITCH POSITIONS</u>	<u>AVERAGE REACTOR COOLANT TEMPERATURE</u>
1. POWER OPERATION	Run	Any temperature
2. STARTUP	Startup/Hot Standby	Any temperature
3. HOT SHUTDOWN	Shutdown ^{#,***}	> 212°F
4. COLD SHUTDOWN	Shutdown ^{#,##,***}	≤ 212°F
5. REFUELING [*]	Shutdown or Refuel ^{**,#}	≤ 212°F

The reactor mode switch may be placed in the Run or Startup/Hot Standby position to test the switch interlock functions provided that the control rods are verified to remain fully inserted by a second licensed operator or other technically qualified member of the unit technical staff.

The reactor mode switch may be placed in the Refuel position while a single control rod drive is being removed from the reactor pressure vessel per Specification 3.9.10.1.

* Fuel in the reactor vessel with the vessel head closure bolts less than fully tensioned or with the head removed.

** See Special Test Exceptions 3.10.1 and 3.10.3.

*** The reactor mode switch may be placed in the Refuel position while a single control rod is being recoupled provided that the one-rod-out interlock is OPERABLE.

ENCLOSURE 2

SERIAL: NLS-84-062

BRUNSWICK STEAM ELECTRIC PLANT
PROPOSED TECHNICAL SPECIFICATION PAGES - UNIT 2

(CP&L SERIAL 84TSB06)

SUMMARY LIST OF REVISIONS
BRUNSWICK UNIT 2

PAGE

COMMENT

1-11

Added Footnotes (#) and (##)

Revised Footnotes (*), (**), and (***)

Changed Column Title to "AVERAGE REACTOR COOLANT
TEMPERATURE"

TABLE 1.2

OPERATIONAL CONDITIONS

<u>OPERATIONAL CONDITIONS</u>	<u>MODE SWITCH POSITIONS</u>	<u>AVERAGE REACTOR COOLANT TEMPERATURE</u>
1. POWER OPERATION	Run	Any temperature
2. STARTUP	Startup/Hot Standby	Any temperature
3. HOT SHUTDOWN	Shutdown ^{#,***}	> 212° F
4. COLD SHUTDOWN	Shutdown ^{#,##,***}	≤ 212° F
5. REFUELING [*]	Shutdown or Refuel ^{**,#}	≤ 212° F

The reactor mode switch may be placed in the Run or Startup/Hot Standby position to test the switch interlock functions provided that the control rods are verified to remain fully inserted by a second licensed operator or other technically qualified member of the unit technical staff.

The reactor mode switch may be placed in the Refuel position while a single control rod drive is being removed from the reactor pressure vessel per Specification 3.9.10.1.

* Fuel in the reactor vessel with the vessel head closure bolts less than fully tensioned or with the head removed.

** See Special Test Exceptions 3.10.1 and 3.10.3.

*** The reactor mode switch may be placed in the Refuel position while a single control rod is being recoupled provided that the one-rod-out interlock is OPERABLE.