
 


8001140123

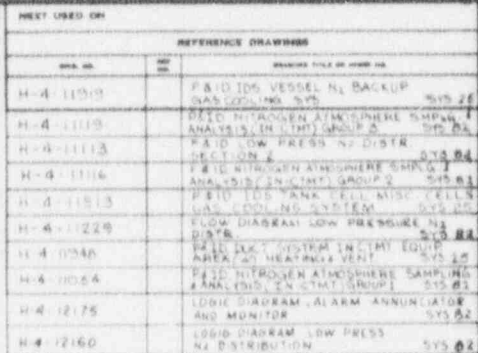

1. FOR SYMBOLS & USAGE SEE LEGEND SHEETS R-4-1093, 94, 95, 96, 98 & 99.
2. ALL ALARMS ON LOCAL BOARDS WILL BE CONNECTED TO COMMON ALARM ANNUNCIATORS IN THE MAIN CONTROL ROOM.
3. ALL MANUAL VALVE NUMBERS PRECEDED BY B2.
4. R/A = RADIOACTIVE SIGNAL.
5. FOR INSTRUMENT AIR SUPPLY TO ALL PNEUMATIC INSTRUMENTS SEE P&ID R-4-1050. TYPICAL AIR SUPPLY TO I/P CONVERTERS IS AS FOLLOWS:



W/A FROM CAPS
H-4-11090-10-5) H-4-11114 (D.12)
H-4-11114 (C.12)

DELETED

[illegible]

ENGINEERING
BY ALL
1. 2 THE 1971
* B 6421

[illegible]