

Date Entered: Aug 21, 2003

TO: USNRC/WASHINGTON
JMCKNIGHT

Copy Number: 145

TRANSMITTAL NUMBER: 248613

PROCEDURE NUMBER: EI-9

TITLE: OFFSITE RADIOLOGICAL MONITORING

TRANSMITTAL: LISTED BELOW ARE NEW/REVISED PROCEDURES WHICH MUST BE
IMMEDIATELY INSERTED INTO OR DISCARDED FROM YOUR PROCEDURE
MANUAL.

Action Required

Section or Description

REMOVE AND DESTROY

EI-9, R/9, ENTIRE PROCEDURE

REPLACE WITH

EI-9, R/9, ENTIRE PROCEDURE

EDITORIAL

**SIGN, DATE, AND RETURN THE ACKNOWLEDGEMENT FORM WITHIN 10 DAYS TO THE PALISADES
PLANT DOCUMENT CONTROL**

SIGNATURE OR INITIALS

DATE

**If applicable, REMOVE ALL travelers and marked up pages in
front of this procedure.**

A045

Procedure No EI-9
Revision 9
Effective Date 8/21/03

PALISADES NUCLEAR PLANT
EMERGENCY IMPLEMENTING PROCEDURE

TITLE: OFFSITE RADIOLOGICAL MONITORING

Approved: JLFontaine
Procedure Sponsor

/

8/19/03
Date

New Procedure/Revision Summary:

Editorial to Revision 9

Specific Changes

TITLE: OFFSITE RADIOLOGICAL MONITORING

Table of Contents

1.0	PERSONNEL RESPONSIBILITY	1
1.1	TECHNICAL SUPPORT CENTER (TSC)/EMERGENCY OFFSITE FACILITY (EOF) HEALTH PHYSICS (HP) SUPPORT GROUP LEADER....	1
1.2	OPERATIONAL SUPPORT CENTER (OSC) HEALTH PHYSICS (HP) SUPERVISOR.....	1
1.3	EMERGENCY OPERATIONS FACILITY (EOF) HEALTH PHYSICS SUPPORT TEAM.....	1
1.4	SITE EMERGENCY DIRECTOR (SED)/EOF DIRECTOR.....	1
1.5	OFFSITE MONITORING TEAM.....	1
2.0	PURPOSE.....	2
3.0	REFERENCES	2
3.1	SOURCE DOCUMENTS	2
3.2	REFERENCE DOCUMENTS	2
4.0	INITIAL CONDITIONS AND/OR REQUIREMENTS	3
5.0	PROCEDURE	4
5.1	OSC HEALTH PHYSICS SUPERVISOR.....	4
	5.1.1 Equipment	4
	5.1.2 Briefing	4
5.2	OFFSITE MONITORING TEAM.....	5
	5.2.1 Deployment Preparation	5
	5.2.2 Emergency Vehicle and Equipment	5
	5.2.3 Meteorological Data.....	5
	5.2.4 Offsite Monitoring Team Log	5
	5.2.5 Evacuation Monitoring	5
	5.2.6 Guidelines for Plume Tracking, Surveying, Sampling.....	6
	5.2.7 Field Collection and Determination of Airborne Concentration/Contamination Surveys.....	6
	5.2.8 Worker Protection Against Iodine	6
	5.2.9 Reporting	6

TITLE: OFFSITE RADIOLOGICAL MONITORING

Table of Contents

6.0	ATTACHMENTS AND RECORDS	7
6.1	ATTACHMENTS.....	7
6.2	RECORDS	7
7.0	SPECIAL REVIEWS	7

ATTACHMENTS

- Attachment 1, "Offsite Monitoring Team List"
- Attachment 2, "Air Sample Analysis Sheet"
- Attachment 3, "Dose Equivalent Iodine Conversion Factors"
- Attachment 4, "Dead Time Correction Curve"
- Attachment 5, "Offsite Monitoring Team Log"
- Attachment 6, "Operational Support Center/Emergency Offsite Facility Phone List"

TITLE: OFFSITE RADIOLOGICAL MONITORING

**USER ALERT
REFERENCE USE PROCEDURE**

Refer to the procedure periodically to confirm that all procedure segments of an activity will be or are being performed. Where required, sign appropriate sign-off blanks to certify that all segments are complete.

1.0 PERSONNEL RESPONSIBILITY

1.1 TECHNICAL SUPPORT CENTER (TSC)/EMERGENCY OFFSITE FACILITY (EOF) HEALTH PHYSICS (HP) SUPPORT GROUP LEADER

The TSC and/or EOF HP Support Group Leader(s), or designate(s), are responsible for ensuring that offsite radiation monitoring is performed.

1.2 OPERATIONAL SUPPORT CENTER (OSC) HEALTH PHYSICS (HP) SUPERVISOR

An OSC HP Supervisor(s) is responsible for tracking, organizing, briefing, and directing the Offsite Monitoring Team(s) at the request for offsite monitoring by the TSC HP Support Group.

1.3 EMERGENCY OPERATIONS FACILITY (EOF) HEALTH PHYSICS SUPPORT TEAM

When the EOF is activated, responsibility for tracking, and direction of the Offsite Monitoring Team(s) is transferred to the EOF HP Support Team.

1.4 SITE EMERGENCY DIRECTOR (SED)/EOF DIRECTOR

Based on who has command and control, either the SED or EOF Director has the responsibility to authorize the use of Potassium Iodide (KI) as a thyroid blocking agent.

1.5 OFFSITE MONITORING TEAM

The Offsite Monitoring Team Technicians are responsible for performing surveys, monitoring personnel and equipment, collecting environmental samples and TLDs, analyzing air samples, and reporting results to the OSC, or the EOF when activated.

TITLE: OFFSITE RADIOLOGICAL MONITORING

2.0 PURPOSE

To provide guidelines for offsite radiological monitoring during an emergency.

3.0 REFERENCES

3.1 SOURCE DOCUMENTS

- 3.1.1 Site Emergency Plan Section 7, "Emergency Facilities and Equipment"
- 3.1.2 EPA-400 Manual, "Protective Action Guidelines and Protective Actions for Nuclear Incidents 1990"
- 3.1.3 EA-JLF-93-01
- 3.1.4 EA-JLF-94-02
- 3.1.5 EA-JLF-97-004
- 3.1.6 10CFR20 Subpart C
- 3.1.7 Docket 50-255 - License DPR-20 Palisades Plant, Technical Specification Change Request Regarding Elimination of Post - Accident Sampling System Requirements

3.2 REFERENCE DOCUMENTS

- 3.2.1 Health Physics Procedure HP 2.18, "Personnel Contamination"
- 3.2.2 Emergency Implementing Procedure EI-10, "Accident Environmental Assessment"
- 3.2.3 Emergency Implementing Procedure EI-13, "Evacuation/Reassembly"
- 3.2.4 Emergency Implementing Procedure EI-16.1, "Maintenance of Emergency Equipment"
- 3.2.5 Emergency Implementing Procedure EI-2.1, "Site Emergency Director"
- 3.2.6 Palisades Administrative Procedure 10.41, "Procedure and Policy Processes"
- 3.2.7 Palisades Administrative Procedure 10.46, "Plant Records"

TITLE: OFFSITE RADIOLOGICAL MONITORING

4.0 INITIAL CONDITIONS AND/OR REQUIREMENTS

4.1 Offsite monitoring shall be initiated at a Site Area Emergency or above, or when the results of onsite monitoring verify that a release of radioactive material has occurred, area and/or process monitors indicate a release has occurred, conditions current and impending warrant monitoring, or upon request by the SED or TSC HP Support Group.

4.2 All members of the Offsite Radiation Monitoring Teams shall perform their actions in such a manner that they keep their exposure As Low As Reasonably Achievable (ALARA), and do not exceed the following yearly dose control levels (without SED approval):

<u>AREA EXPOSED</u>	<u>CONTROL LEVEL (rem)</u>
Total Effective Dose	2.0
Equivalent (TEDE)	4.0
Shallow Dose Equivalent (SDE) for the Whole Body and Extremities	40
Lens of Eye (LDE)	12

4.3 Emergency Implementing Procedure EI-2.1, "Site Emergency Director," gives requirements for authorizing exposure in excess of the Consumers Energy Administrative Dose Control Levels and Federal Regulatory dose limits.

4.4 Turnover of the Offsite Monitoring Teams from the OSC to the EOF HP Support Group should be completed via radio. Telephone communications may be used if radio problems are encountered. The following information should be included in this turnover:

- a. Number of teams
- b. Team members
- c. Team(s) location
- d. Surveys/Samples performed, results
- e. Team Members Available Dose

TITLE: OFFSITE RADIOLOGICAL MONITORING

5.0 PROCEDURE

USER ALERT
REFERENCE USE PROCEDURE

Refer to the procedure periodically to confirm that all procedure segments of an activity will be or are being performed. Where required, sign appropriate sign-off blanks to certify that all segments are complete.

5.1 OSC HEALTH PHYSICS SUPERVISOR

5.1.1 Equipment

Ensure each Offsite Monitoring Team is equipped with instrumentation and personal protective equipment (PPE) needed for potential and actual radiological hazards encountered in the field. Guidelines for when to use PPE should be understood.

5.1.2 Briefing

Designate and brief the Offsite Monitoring teams prior to dispatch as outlined in Attachment 1, Section 1 of this procedure.

TITLE: OFFSITE RADIOLOGICAL MONITORING

5.2 OFFSITE MONITORING TEAM

5.2.1 Deployment Preparation

Refer to Attachment 1, Section 1b of this procedure to ensure all necessary equipment is available. Obtain a briefing from an OSC HP Supervisor prior to dispatch.

5.2.2 Emergency Vehicle and Equipment

Perform emergency vehicle and emergency equipment checks as soon as possible upon dispatch, in an area of low background, in accordance with Attachment 1, Section 2, of this procedure.

5.2.3 Meteorological Data

Verify given meteorological data in the field by observation of the flag, cooling tower plume, movement of trees, or other suitable means. If the observations conflict with the given data, contact the OSC to verify meteorological data and, if needed, redetermine affected areas to be monitored.

5.2.4 Offsite Monitoring Team Log

Each monitoring team shall keep a log of pertinent data. Record on Attachment 5 of this procedure.

- a. Significant Plant conditions, including Emergency Classification
- b. Meteorological data, observations
- c. Communications, requests
- d. Surveys performed, locations, routes
- e. Dose tracking for team members
- f. Problems, deficiencies noted
- g. Personnel monitored at Reassembly Control Point
- h. Technician initials

5.2.5 Evacuation Monitoring

Refer to Attachment 1, Section 3 of this procedure for Evacuation Monitoring.

TITLE: OFFSITE RADIOLOGICAL MONITORING

5.2.6 Guidelines for Plume Tracking, Surveying, Sampling

Refer to Attachment 1, Sections 4 and 5 of this procedure. Record data on Attachments 2 and 5 of this procedure.

5.2.7 Field Collection and Determination of Airborne Concentration/Contamination Surveys

Refer to Attachment 1, Section 5 of this procedure for Airborne sampling and Contamination Surveys.

5.2.8 Worker Protection Against Iodine

- a. Thyroid blocking agents shall be considered if a worker would exceed a 1000 DAC-hrs from isotopes of iodine. | e
- b. Authorization to use thyroid blocking agents shall be given by the SED or EOF Director. Once authorization has been given, each worker shall personally decide whether to take the blocking agent.
- c. The thyroid blocking agent is in the form of Potassium Iodide (KI) tablets in the amount of 130 mg per tablet. These tablets should be made available on a basis of one tablet per day per worker for a maximum of ten days. KI tablets administered three to four hours post exposure can reduce the thyroid dose by 50 percent. These tablets (KI) should be administered within four hours of exposure for maximum effectiveness.

5.2.9 Reporting

- a. Report results of surveys and sample analysis as soon as possible to the OSC or EOF by mobile radio. IF this means of communication is not available/functional, THEN use the emergency vehicle cellphones. IF the cell phones also fail, THEN use the nearest telephone available. | e

TITLE: OFFSITE RADIOLOGICAL MONITORING

6.0 ATTACHMENTS AND RECORDS

6.1 ATTACHMENTS

6.1.1 Attachment 1, "Offsite Monitoring Team List"

6.1.2 Attachment 2, "Air Sample Analysis Sheet"

6.1.3 Attachment 3, "Dose Equivalent Iodine Conversion Factors"

6.1.4 Attachment 4, "Dead Time Correction Curve"

6.1.5 Attachment 5, "Offsite Monitoring Team Log"

6.1.6 Attachment 6, "Operational Support Center/Emergency Offsite Facility Phone List"

6.2 RECORDS

Records generated by this procedure shall be filed in accordance with Palisades Administrative Procedure 10.46, "Plant Records."

7.0 SPECIAL REVIEWS

The scope of this procedure does not include activities that require a 50.59 review per Palisades Administrative Procedure 10.41, "Procedure and Policy Processes." Therefore, changes to this procedure do not require a 50.59 review.

e

OFFSITE MONITORING TEAM LIST**SECTION 1: DEPLOYMENT**

- a. Review the Offsite Monitoring Deployment Kit (3-ring binder in OSC Emergency Kit). Contents include: Emergency Implementing Procedures EI-9, "Offsite Radiological Monitoring;" EI-10, "Accident Environmental Assessment;" EI 16.1, "Maintenance of Emergency Equipment;" EI-13, "Evacuation/Reassembly;" and copies of various forms for use in the field.
- b. Determine and obtain necessary equipment in accordance with assignment and the following equipment list:
 - 1. Primary and Secondary dosimetry.
 - 2. Interim protective clothing and respiratory equipment, based on Plant conditions and job assignment in desired area(s).
 - 3. Writing material.
 - 4. Emergency vehicle keys. (Stored in HP Key Locker and OSC Emergency Kit.)
 - 5. Radiation Detection Instrumentation (Instrumentation for emergency vans is stored in deployment kits located in the Northeast corner of the Fan Room, which is North of the OSC. Perform Operational Checks of instruments prior to leaving the OSC. | e
- c. Obtain briefing from the OSC HP Supervisor in the following areas, if applicable:
 - 1. Meteorological data:
 - Wind direction
 - Wind Speed
 - Stability Class
 - 2. Plant conditions:
 - Affected Components/Areas
 - Release Time
 - Release Path
 - Emergency Class

OFFSITE MONITORING TEAM LIST

3. Projected dose rates and airborne activity.
4. Locations/routes to be surveyed.

(ie, nearest population center, three downwind sectors for plume, outer boundaries, centerline, leading edge, evacuation reassembly control point/monitoring station)
5. Surveys/samples desired.

(ie, dose rates three inches and three feet from ground, open/closed β windows; surface contamination; airborne activity)

NOTE: Initiate Emergency Implementing Procedure EI-10, "Accident Environmental Assessment," and obtain replacement TLDs.

6. Environmental samples and TLDs desired.
7. Optimum route to designated area, such that exposure is kept ALARA.
8. Protective action(s) guidelines/limits.
9. Communications, preferred and alternate methods, frequency, and emergency phone numbers. (Reference Attachment 6 of this procedure for preferred phone numbers.)

SECTION 2: VEHICLE AND EQUIPMENT CHECKS

- a. Start vehicle.
- b. Establish radio contact with the OSC to indicate operability.
- c. Perform vehicle checks (ie, fuel tank, lights, horn, wipers, seat belts).
- d. Emergency Implementing Procedure EI-16.1, "Maintenance of Emergency Equipment," Attachment 1, contains the inventory list for Kit 3. While a kit inventory is not necessary, this should be reviewed for knowledge of kit contents.
- e. Perform operational check of the inverter.
- f. Verify given met data by observation.
- g. Data logged, Attachment 5.

OFFSITE MONITORING TEAM LIST

SECTION 3: EVACUATION MONITORING

- a. Proceed to the assigned Reassembly Control Point/Monitoring Station (established at: Access Road; Parking Lot of Van Buren State Park; or, Parking Lot of Covert Township Park) and ascertain habitability prior to establishing the monitoring station. If personnel cannot be deconned at the selected location, they should be sent to the Allegan Service Center. Reference Emergency Implementing Procedure EI-13, "Evacuation/Reassembly," for guidance. Contact the OSC so that arrangements can be made for use of the Allegan Service Center.
- b. EI-13, "Evacuation/Reassembly," implemented: Personnel surveyed, dosimeters read, dosimetry collected, etc.
- c. Personnel decontaminated in accordance with Health Physics Procedure HP 2.18, "Personnel Contamination," (copy of HP 2.18 and forms are in decon kit).
- d. Data logged, Attachment 5.
- e. Data reported to OSC or EOF.

OFFSITE MONITORING TEAM LIST**SECTION 4: PLUME TRACKING**

NOTE: The following guidance is an aid only in initially locating and following the plume.

- a. Using given meteorological data and the 10-mile Emergency Planning Zone (EPZ) map, a fair idea can be quickly obtained of the possible location of the plume. Using the wind speed and time from release data, the leading edge of the plume can be projected and followed.

NOTE: Plume location and dose rate information shall be reported as soon as possible. This information is vital for Members of the Public Dose Assessment and Protective Action Recommendations.

- b. Traverse the plume to determine outer boundaries, centerline, and respective dose rates.
 1. The survey instrument should be held at an open window of the vehicle, the meter monitored continuously.
 2. When an increase in dose rate is noted, record the odometer reading, relative map location, dose rate, and time. (When an air sample is taken, all data should be recorded on Attachment 2.)
 3. Continuing slowly, record dose rate increases and odometer readings to the centerline of the plume, where the dose rate will be at a maximum, periodically checking open vs closed beta window dose rates for the presence of the plume at ground level.
 4. At the centerline, unless high dose rates prohibit, obtain an air sample (iodine and particulate) and survey for dose rates at three inches and three feet from the ground. Check open and closed beta window dose rates, and take smear(s) for loose surface contamination. If centerline open/closed window readings indicate there is no ground level plume present, the air sample and surface contamination survey may be omitted. Record all data on Attachment 2.
 5. Continue to the opposite plume boundary, noting dose rates and odometer readings, and finally, the relative map location of the outer boundary.

OFFSITE MONITORING TEAM LIST

- c. When traversing the plume, keep vehicle windows and vents closed, except for that necessary to take dose rate readings en route. Avoid dusty, gravel, or dirt roads when traversing the plume. Periodically perform personnel and vehicle interior surveys for contamination in a low background area. If minor contamination is found, decontaminate, if possible. Record data on Attachment 5. Gross vehicle and personnel decontamination should not be attempted until the team is recalled. Report gross contamination results to the OSC or EOF for guidance and ultimate location for Vehicle and/or Personnel decontamination.
- d. When traversing or sampling in a ground level plume, evaluate necessary protective clothing.
- e. Check self-reading or electronic dosimeters frequently (ie, entry into plume, exit from plume), record times and dose received, and report to the OSC or EOF. Dose received per plume entry in addition to previous dose received in the current year should be closely tracked to ensure authorized dose control levels are not exceeded.

SECTION 5: AIRBORNE SAMPLING AND CONTAMINATION SURVEYS

- a. Field collection under emergency conditions should be a 5 ft³ sample, normally obtained by taking a 2 cfm sample for 2.5 minutes. A shorter sample would be appropriate in the presence of high dose rates.
- b. Complete Sections 1 and 2 of Attachment 2 to document dose rates, contamination levels and air sample data to determine corrected volume. Section 1 is to be completed for every air sample taken.
- c. Carefully remove filter and cartridge. Mark the direction of air flow on the silver zeolite cartridge with an arrow. Handle filters with care to prevent cross contamination or loss of collected material, using tweezers when possible.

NOTE: If time constraints do not permit completion of calculations, transmit count rate data to the OSC or EOF by mobile radio. Also, IF observed count rates with the PRM-6 are greater THEN 120,000 cpm use the dead time correction curve to determine the corrected count rate. See Attachment 4.

- d. Perform initial gross analysis using a PRM-6 count rate meter with an HP-210 probe, or equivalent.

| e

OFFSITE MONITORING TEAM LIST

- e. Field determination of particulate Airborne Activity:
 - 1. Determine the background count rate with the HP-210 probe, or equivalent, in place on the sample holder.
 - 2. Place the particulate filter in the sample holder, upstream side up. With the HP-210 probe, or equivalent, in place on the holder, the filter should be approximately ½ inch from the detector.
 - 3. Determine the gross particulate count rate.
 - 4. Complete Section 3 of Attachment 2.
 - 5. Place the sample in a bag or envelope, label with date, time sample started and ended, average flowrate, location sample was taken, and initial.

- f. Field determination of gross Iodine Activity.

- 1. Determine the background count rate with the HP-210 probe, or equivalent, in the counting area.

NOTE: Backside readings at ½" are preferred, but if count rate is negligible use the frontside at ½".

- 2. Determine the gross iodine count rate by placing the HP-210 probe, or equivalent, ½" from the backside of cartridge.
 - 3. Complete Section 4 of Attachment 2.
 - 4. Place the cartridge in a bag, label same as for the particulate filter.
- g. Save all samples for further/future analysis, storing high level samples in a shielded area.
- h. Reevaluate protective measures necessary (protective clothing) based on determined airborne activity levels.

AIR SAMPLE ANALYSIS SHEET

Proc No EI-9
Attachment 2
Revision 9
Page 1 of 1

1. RADIOLOGICAL DATA (Taken at Each Air Sample Location)

- a. 3 foot: _____ mR/hr(OW) - _____ mR/hr(CW) X _____ ¹BCF = _____ mrad/hr
- b. 3 inch: _____ mR/hr(OW) - _____ mR/hr(CW) X _____ ¹BCF = _____ mrad/hr
- c. Ground Smear: _____ cpm/100cm²(Gross) - _____ cpm (BKG) = _____ cpm (Net)
- d. Location: _____

¹BCF = Beta Correction Factor

Date: _____ Time: _____

2. AIR SAMPLE DATA

Consumers Energy Sampler No: _____

Date: _____ Start Time: _____ Stop Time: _____

Sample Duration _____ (min) X Flowrate _____ (cfm) = Total Volume _____ (ft³)

Corrected Volume (Particulate and Iodine):

(Total Volume ft³ _____) (0.90) (2.83E4 cc/ft³) = _____ cc

3. PARTICULATE AIR SAMPLE ANALYSIS

Instrument Model/Consumers Energy No PRM-6/ _____ Efficiency _____

Gross _____ cpm - Background _____ cpm = _____ ccpm

Calculation:

$\mu\text{Ci/cc} = \frac{\text{ccpm}}{\text{Corrected Volume (cc) (Eff) (2.22E6 dpm/\mu Ci)}}$

(Corrected Volume _____ cc) (Eff _____) (2.22E6 dpm/ μCi)

4. IODINE SAMPLE ANALYSIS

Backside (Preferred) _____ Frontside _____ (Check One)

Instrument Model/Consumers Energy No PRM-6/ _____

Gross _____ cpm - Background _____ cpm = _____ ccpm

Calculation:

$\mu\text{Ci/cc} = \frac{\text{ccpm}}{\text{Corrected Volume (cc) (}^2\text{CF) (ccpm/\mu Ci)}}$

(Corrected Volume _____ cc) (²CF _____ ccpm/ μCi)

Completed By: _____ Reviewed By: _____

²Conversion Factor (CF) is 1.48E5 ccpm/ μCi for backside count rates or 3.77E6 ccpm/ μCi for frontside count rates. These factors are acceptable for reactor critical and up to 8 hr post reactor shutdown. After 8 hr post reactor shutdown, use Conversion Factors in Attachment 3, Table 1 or Table 2.

DOSE EQUIVALENT IODINE CONVERSION FACTORS

Proc No EI-9
Attachment 3
Revision 9
Page 1 of 2

**TABLE 1
BACKSIDE (PERFERRED METHOD)**

TIME SINCE RX SHUTDOWN ccpm/ μ Ci (HRS)		TIME SINCE RX SHUTDOWN ccpm/ μ Ci (HRS)		TIME SINCE RX SHUTDOWN ccpm/ μ Ci (HRS)	
0.25	2.73E+5	7.00	1.23E+5	28.00	5.98E+4
0.50	2.40E+5	8.00	1.17E+5	30.00	5.63E+4
0.75	2.23E+5	9.00	1.12E+5	32.00	5.30E+4
1.00	2.10E+5	10.00	1.07E+5	34.00	4.99E+4
1.25	2.00E+5	12.00	9.93E+4	36.00	4.65E+4
1.50	1.92E+5	14.00	9.26E+4	38.00	4.36E+4
1.75	1.85E+5	16.00	8.69E+4	40.00	4.06E+4
2.00	1.80E+5	18.00	8.11E+4	42.00	3.80E+4
3.00	1.61E+5	20.00	7.66E+4	44.00	3.52E+4
4.00	1.48E+5	22.00	7.19E+4	46.00	3.28E+4
5.00	1.38E+5	24.00	6.75E+4	48.00	3.02E+4
6.00	1.30E+5	26.00	6.35E+4	50.00	2.79E+4

DOSE EQUIVALENT IODINE CONVERSION FACTORS

Proc No EI-9
Attachment 3
Revision 9
Page 2 of 2


TABLE 2
FRONTSIDE (ALTERNATE METHOD)

TIME SINCE RX SHUTDOWN ccpm/ μ Ci (HRS)		TIME SINCE RX SHUTDOWN ccpm/ μ Ci (HRS)		TIME SINCE RX SHUTDOWN ccpm/ μ Ci (HRS)	
0.25	4.58E+6	7.00	3.18E+6	28.00	1.20E+6
0.50	4.51E+6	8.00	3.01E+6	30.00	1.16E+6
0.75	4.47E+6	9.00	2.84E+6	32.00	1.13E+6
1.00	4.43E+6	10.00	2.69E+6	34.00	1.09E+6
1.25	4.36E+6	12.00	2.40E+6	36.00	1.05E+6
1.50	4.32E+6	14.00	2.15E+6	38.00	1.01E+6
1.75	4.25E+6	16.00	1.92E+6	40.00	9.74E+5
2.00	4.22E+6	18.00	1.71E+6	42.00	9.43E+5
3.00	3.99E+6	20.00	1.53E+6	44.00	9.05E+5
4.00	3.77E+6	22.00	1.36E+6	46.00	8.76E+5
5.00	3.56E+6	24.00	1.28E+6	48.00	8.41E+5
6.00	3.37E+6	26.00	1.24E+6	50.00	8.15E+5

DEAD TIME CORRECTION CURVE

Dead Time Correction Curve

For PRM-6

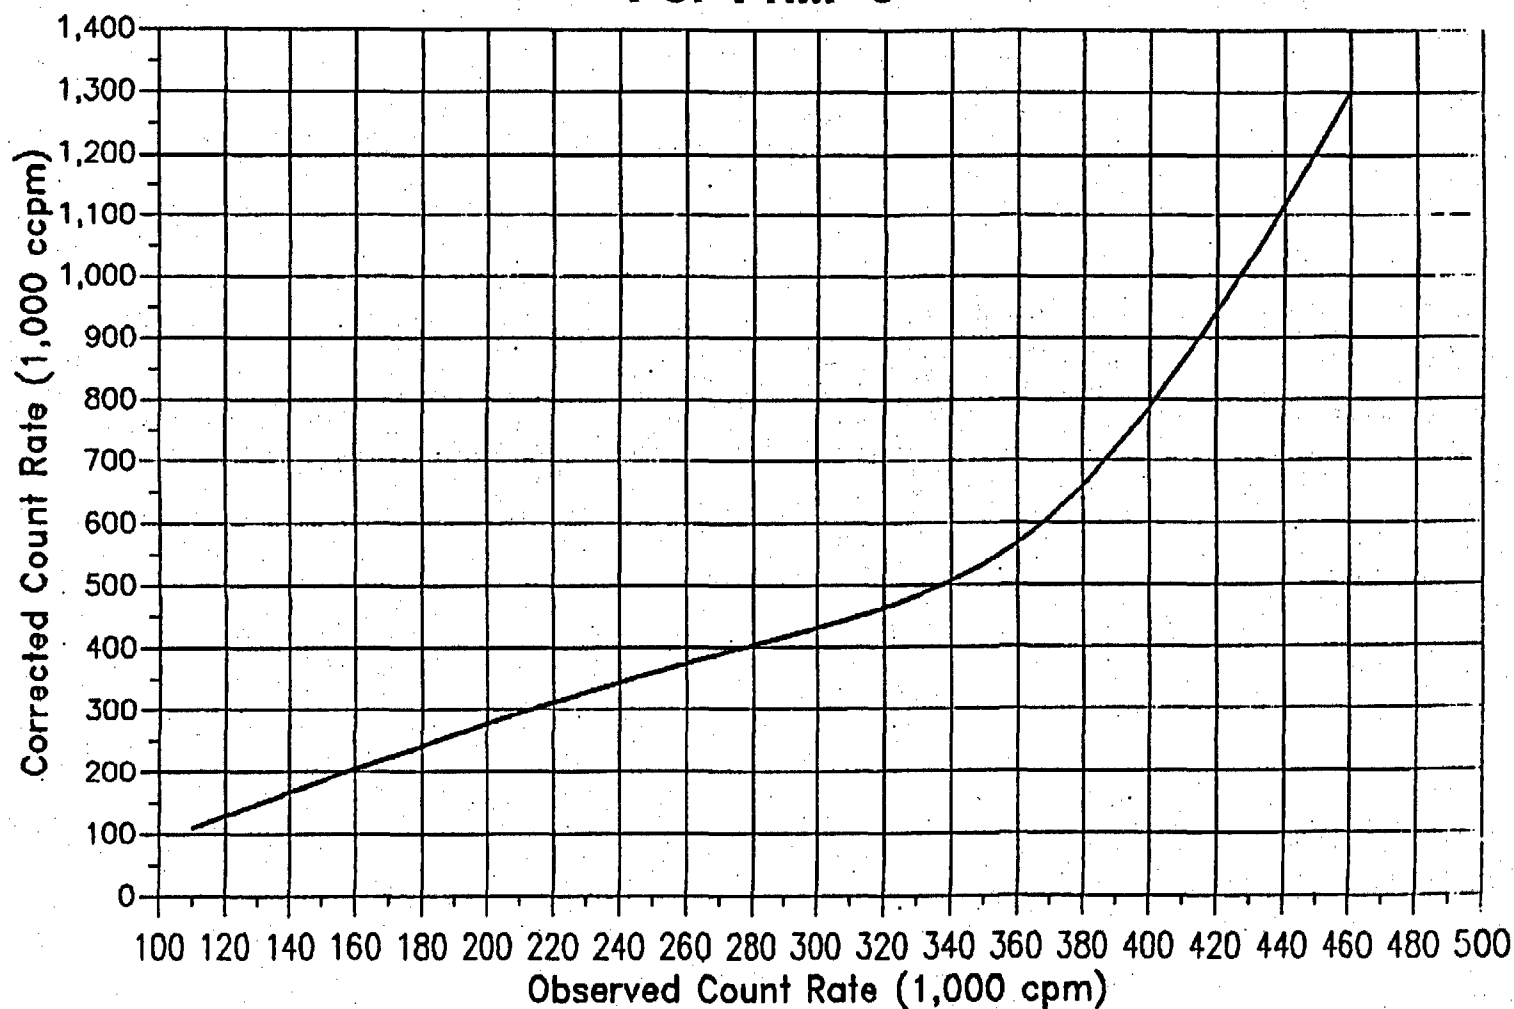

OFFSITE MONITORING TEAM LOG

Date: _____ Technicians: _____

TIME	DATA

OPERATIONAL SUPPORT CENTER /EMERGENCY OFFSITE FACILITY PHONE LIST

OSC Director

764-2109 (OSC Director)*
764-2110 (TIF)
764-2243 (OSC Communicator)

Health Physics

764-2409 (OSC)*
764-2410 (OSC)*
637-7397 (EOF)*
637-6695 (EOF)*
764-2385 (EOF, Plant Phone)
764-2384 (EOF, Plant Phone)

Fax Line

764-2730 (OSC)
458-7815 (EOF)
458-8078 (EOF)

Chemistry

764-2596 (OSC)

General Use

764-2346 (OSC)

Locker Room

764-2600
764-2606

Power Failure Only

764-8994 (OSC)*

Off-Site Monitoring Team Vehicle Cell Phones

269-921-5395
269-921-5396

*Preferred Phones for communications from Offsite Monitoring Teams

e